


CLOSED SHELVING

ASSEMBLY INSTRUCTIONS


15800 NW 15th Avenue North Miami Beach, FL 33169 www.quantumstorage.com 1-800-685-4665

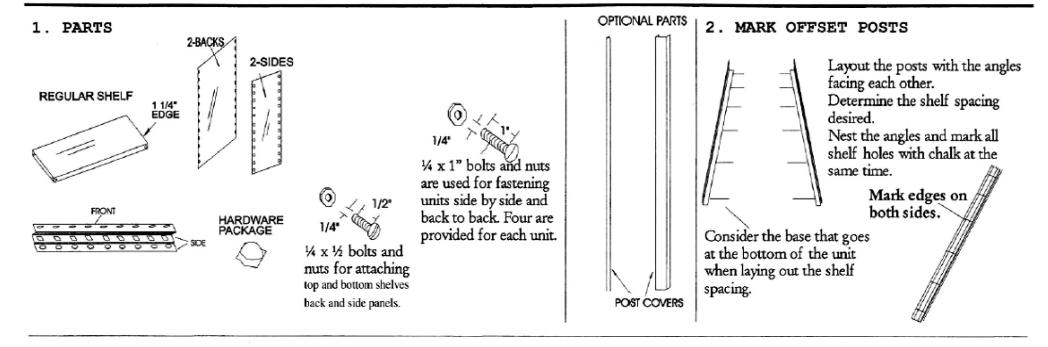

INSERT BOLTS

Insert bolts on marked centers.


Insert only two bolts per shelf at this.

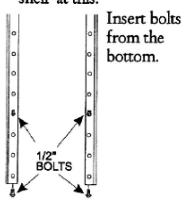

4. INSTALL BACKS

Place the backs between the angles with the bolts through the holes in the back.

Overlap 3 inches in the center and be flush with the post ends at top and tighten nuts finger.

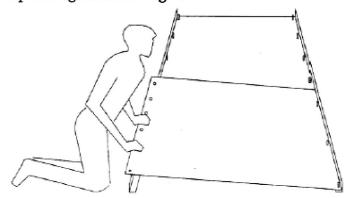

5. INSTALL SHELVING

Insert bottom of clip first.

Clips fit in the square holes in the post.

Use four clips per shelf.

Install four clips at desired shelf height.

Place each shelf on clips and tap down to seat.




CLOSED SHELVING

ASSEMBLY INSTRUCTIONS

15800 NW 15th Avenue North Miami Beach, FL 33169 www.quantumstorage.com 1-800-685-4665


SIDES

INSTALL FRONT POST.

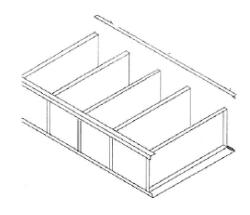



INSTALL SIDES

Attach side panel to posts using inner most hole pattern (hole pattern not being used by shelves). The top half of the side will overlap the bottom half of the side 3 inches.

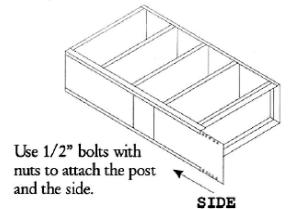

8. JOIN MULTIPLE UNITS BACK TO BACK

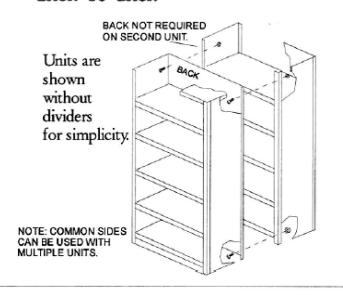



Tie in top and bottom of all post with 1" bolts with nuts.

On units above 87" high, tie in the top, bottom and middle in the same way.

NOTE: COMMON SIDES CAN BE USED WITH MULTIPLE UNITS.

